
IMPEL Backplane Module Installation Press-In Tool

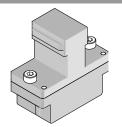

Application Tooling Specification Sheet



Order No. 62201-9001

FEATURES

- Polarized tool prevents product damage
- Tool provides uniform distribution of press force across entire pin array
- May be used as a stand-alone tool or mounted in an optional holder with other Molex press-in tools

SCOPE

<u>Products</u>: IMPEL 1.9mm Backplane Header Assembly, (6-Pair by 12 Column Assemblies). See Product List below for specific part numbers.


Product List

The following is a partial list of the product order numbers and their specifications this tool is designed to run. Updates to this list are available on <u>www.molex.com</u>.

Series	Column	Guide Style	Backplane Header Order No.				
171395	12	Unguided	171395-1204	171395-1205	171395-1207	171395-1208	

Tool Setup

Depending on the number of connectors to be installed and/or the press used, this tool can be used alone or with a group of press-in tools, mounted in a 62201-95xx rail (ordered separately). See Figure 1.

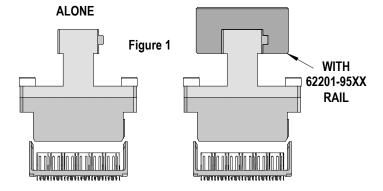

Release Date: 01-08-16 Revision Date: 01-08-16 **UNCONTROLLED COPY**

Tool Installation

The 62201-95xx rail is available in a variety of lengths to accommodate multiple press-in tools.

Rail Part Number	Rail Overall Length	
62201-9501	24mm (0.94 in)	
62201-9502	72mm (2.83 in)	
62201-9503	156mm (6.14 in)	
62201-9504	216mm (8.50 in)	
62201-9509	254mm (10.0 in)	
62201-9511	305mm (12.0 in)	

Reference: This Press-In Tool is 23.5mm (0.93 in.) long.


Printed Circuit Board (PCB) Support

The IMPEL connectors require up to 3.6kg (8 lb) of force per pin to press into the PCB. To prevent excessive PCB flexure and/or damage to the PCB, a support plate is strongly recommended directly beneath the connector hole pattern.

Due to the custom nature of every application, Molex does not offer any PCB support plate. The customer must furnish their own support plate.

When creating the PCB support plate, remember to allow clearance for the connector pins as they pass through the PCB thickness.

Press Equipment Recommendations

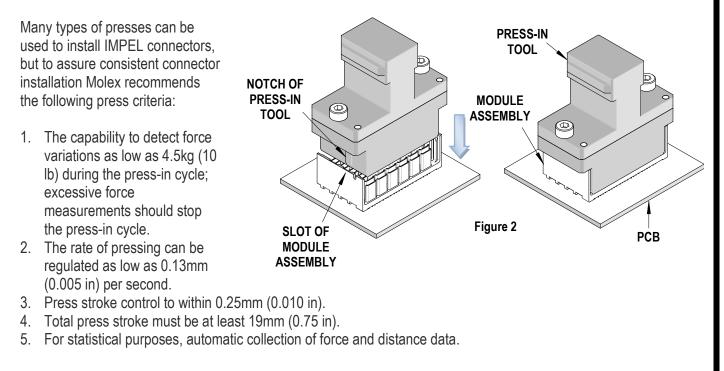

Release Date: 01-08-16 Revision Date: 01-08-16 **UNCONTROLLED COPY**

Tool Operation

- 1. Insert by hand the backplane signal module assembly (s) carefully into the PCB hole pattern. Make sure the connector(s) are oriented properly by confirming the location of the #1 circuit notch with respect to the PCB layout.
- 2. Insert the Press-In Tool making sure that the notch in this tool is inserted into the slot on top of the connector housing of the backplane signal module assembly. See Figure 2.
- 3. Using the application tool and an appropriate press, seat the header assembly until there is less than 0.10mm (.004 in) clearance between the bottom of the plastic housing and the surface of the PCB. See Figure 3.

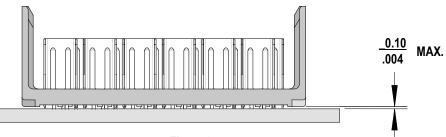


Figure 3

There should be no broken stand-offs along the perimeter of the part (an indication of over-pressing).

CAUTION: To prevent injury, never operate any press without the guards in place. Refer to the press manufacturer's instruction manual.

CAUTION: Molex application tooling specifications are valid only when used with Molex connectors and tooling.

Contact Information

For more information on Molex application tooling please contact Molex at 1-800-786-6539.

http://www.molex.com

Release Date: 01-08-16 Revision Date: 01-08-16 **UNCONTROLLED COPY**